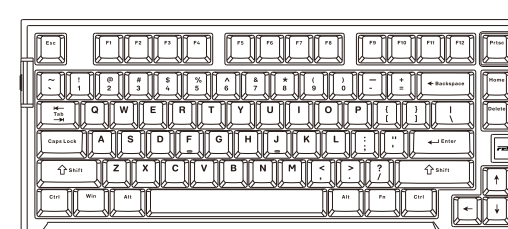 
 
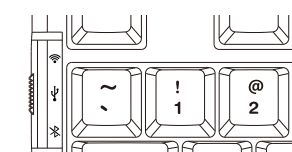 
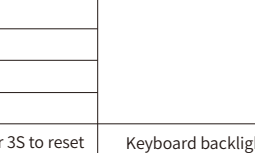 
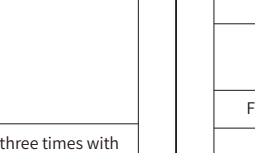 
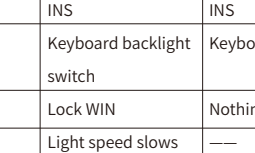 


材质:128G铜板纸,单色印刷,折叠页

Product parameters Product brand: FEKER Product Name: IK85Pro Product structure: Leaf spring Gasket structure Product size: 348.3x143.8x44mm Product weight: ≈ 920g Number of keys: 82Key+metal knob Matrix: Full key without impact Connection method: Wired USB/Bluetooth/2.4G Interface: Keywire separated typec interface Battery capacity: 800mAh Backlight: RGB (18 sets of light effects) Key cap: JSA thermal sublimation key cap Compatibility: Windows 7/8/9/10/11/Mac/Linux/Android/iOS 	Switch indication instructions MAC mode: Switch to MAC mode WIN mode: Switch to Win mode Push up: 2.4G mode Middle: USB mode, factory default Push down: Bluetooth mode CAPS indicator light: CAPS key blue light indication Lock win indicator light: WIN key blue light indication Charging indicator light: When charging, the FN button's red light is on and off when fully charged, and the red light flashes quickly when the battery is low   Lighting effect description 1. After powering on, the light turns on and the white light runs around the keyboard, and the tail turns off. After running all the buttons, the light state before powering off is restored. 2. The lighting order of the light mode is from top to bottom in the table, and after switching the mode, there is OFF. 3. 18 lighting effects   	Explanation of Sleep Mechanism 1. Deep sleep: After 10 minutes of keyless operation on the keyboard, it will be in deep standby mode, with Bluetooth disconnected and dormant. Press any button to wake up the keyboard backlight and reconnect to Bluetooth; 2. Power saving sleep: After 2 minutes of keyless operation on the keyboard, the backlight turns off. Press any button to wake up the keyboard backlight and connect back to Bluetooth; Roller Function Description Default: Mute/Left V-/Right V+   	Mode Connection Description 1. Bluetooth Profile Connection Bluetooth name: FEKER IK85-1, FEKER IK85-2, FEKER IK85-3 ① FN+1#: Short press to switch to Bluetooth 1, long press to pair Bluetooth 1; ② FN+2@: Short press to switch to Bluetooth 2, long press to pair Bluetooth 2; ③ FN+3#: Short press to switch to Bluetooth 3, long press to pair with Bluetooth 3; Operation: After the keyboard is turned on, press and hold FN+1/2/3# to enter Bluetooth mode. Long press and hold the FN+1/2/3# combination key for 3S, and the keyboard will enter the code checking state. The 1/2/3/3# indicator light will flash quickly and white, and the indicator light will remain on when connected.After being unable to find the paired device for 30s, the exit code matching mode light turns off and the keyboard enters sleep. 2. 2.4G mode connection Short press to switch to 2.4G, long press to pair with 2.4G Operation: After the keyboard is turned on, press FN+4S to enter 2.4G mode, and then press the FN+4S combination key for 3S to enter pairing mode. After inserting the receiver, the 4S indicator light will flash quickly and white. Once pairing is successful, exit pairing.The mode light remains on for 2 seconds, and after 30 seconds when the paired device cannot be found, the exit code matching mode light turns off, and the keyboard enters sleep.	Key composite function key description <table> <tr> <th>Combination button</th><th>WIN function</th><th>MAC function (single press trigger)</th><th>Describe</th></tr> <tr> <td>FN+F1</td><td>This computer</td><td>Screen brightness decrease</td><td rowspan="6">Flip the switch to select MAC/WIN</td></tr> <tr> <td>FN+F2</td><td>Homepage</td><td>Screen brightness increase</td></tr> <tr> <td>FN+F3</td><td>Calculator</td><td>Multitasking controller</td></tr> <tr> <td>FN+F4</td><td>Player</td><td>Program List</td></tr> <tr> <td>FN+F5</td><td>Previous song</td><td>Nothing</td></tr> <tr> <td>FN+F6</td><td>Next song</td><td>Nothing</td></tr> <tr> <td>FN+F7</td><td>Play Pause</td><td>Previous song</td><td rowspan="6">Keyboard backlight flashing three times with white light</td></tr> <tr> <td>FN+F8</td><td>Suspend</td><td>Play Pause</td></tr> <tr> <td>FN+F9</td><td>Mute</td><td>Next song</td></tr> <tr> <td>FN+F10</td><td>Volume-g</td><td>Mute</td></tr> <tr> <td>FN+F11</td><td>Volume+</td><td>Volume-</td></tr> <tr> <td>FN+F12</td><td>Mailbox</td><td>Volume+</td></tr> <tr> <td>FN+BAKSPACE</td><td>Long press and hold for 3S to reset</td><td>Long press and hold for 3S to reset</td><td rowspan="2">(Order: Colorful, Red, Orange, Yellow, Green, Green, Blue, Purple, White)</td></tr> <tr> <td>FN+[]</td><td>Keyboard backlight effect switching</td><td>Keyboard backlight effect switching</td></tr> </table>	Combination button	WIN function	MAC function (single press trigger)	Describe	FN+F1	This computer	Screen brightness decrease	Flip the switch to select MAC/WIN	FN+F2	Homepage	Screen brightness increase	FN+F3	Calculator	Multitasking controller	FN+F4	Player	Program List	FN+F5	Previous song	Nothing	FN+F6	Next song	Nothing	FN+F7	Play Pause	Previous song	Keyboard backlight flashing three times with white light	FN+F8	Suspend	Play Pause	FN+F9	Mute	Next song	FN+F10	Volume-g	Mute	FN+F11	Volume+	Volume-	FN+F12	Mailbox	Volume+	FN+BAKSPACE	Long press and hold for 3S to reset	Long press and hold for 3S to reset	(Order: Colorful, Red, Orange, Yellow, Green, Green, Blue, Purple, White)	FN+[]	Keyboard backlight effect switching	Keyboard backlight effect switching	Combination button WIN function MAC function (single press trigger) Describe <table> <tr> <td>FN+Enter</td><td>Keyboard backlight effect switching</td><td>Keyboard backlight effect switching</td><td>18 default light effects follow the current</td></tr> <tr> <td>FN+↑</td><td>Light brightness+</td><td>---</td><td>When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.</td></tr> <tr> <td>FN+↓</td><td>Light brightness-</td><td>---</td><td>When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.</td></tr> <tr> <td>FN+,<</td><td>Accelerated light effect speed</td><td>Accelerated light effect speed</td><td>When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.</td></tr> <tr> <td>FN+,></td><td>Slow down light effect speed</td><td>Slow down light effect speed</td><td>When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.</td></tr> <tr> <td>FN+Home</td><td>END</td><td>END</td><td>---</td></tr> <tr> <td>FN+DEL</td><td>INS</td><td>INS</td><td>---</td></tr> <tr> <td>FN+L</td><td>Keyboard backlight switch</td><td>Keyboard backlight switch</td><td>---</td></tr> <tr> <td>FN+WIN-L</td><td>Lock WIN</td><td>Nothing</td><td>WIN bright blue light</td></tr> <tr> <td>FN+→</td><td>Light speed slows down</td><td>---</td><td>When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.</td></tr> <tr> <td>FN+←</td><td>Accelerated light speed</td><td>---</td><td>When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.</td></tr> </table>	FN+Enter	Keyboard backlight effect switching	Keyboard backlight effect switching	18 default light effects follow the current	FN+↑	Light brightness+	---	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.	FN+↓	Light brightness-	---	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.	FN+,<	Accelerated light effect speed	Accelerated light effect speed	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.	FN+,>	Slow down light effect speed	Slow down light effect speed	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.	FN+Home	END	END	---	FN+DEL	INS	INS	---	FN+L	Keyboard backlight switch	Keyboard backlight switch	---	FN+WIN-L	Lock WIN	Nothing	WIN bright blue light	FN+→	Light speed slows down	---	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.	FN+←	Accelerated light speed	---	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.	产品质保 感谢您对FEKER产品的信任和支持,为了让您放心使用产品, 更好的保证您的权益。 我司将严格遵守并执行相关规定, 实行售后。 1. 服务有效期: 自购买之日起质量保证12个月, 终生维护, 配件不在保修范围内; 2. 服务内容: 按微型计算机商品维修更换责任规定提供服务; 3. 不属于服务范围: a. 已超出有效服务或免费维修期的; b. 未按照正确说明使用、维护、保管导致故障或损坏的; c. 由于不可抗力 (如自然灾害等) 原因造成的产品之不良; d. 人为因素导致产品不良 (如操作失误、碰撞、进水, 输入不合适电压等) ; e. 一切人为损坏、自行拆机、拆封标、使用不当等, 不在保修范围。 质保卡 产品型号: _____ 购买日期: _____ 客户姓名: _____ 联系电话: _____ 联系地址: _____ 品牌商: 深圳市翰德昌电子科技有限公司 地址: 深圳市宝安区沙井街道沙松路135号厚德国际C栋502 生产商: 东莞市诺必达智能科技有限公司 地址: 广东省东莞市虎门镇马路1号中能电磁科技园7栋B5 执行标准: GB/T 14081-2010 合格证 FEKER 更多产品信息请关注 FEKER官网: https://www.fekergaming.com
Combination button	WIN function	MAC function (single press trigger)	Describe																																																																																																
FN+F1	This computer	Screen brightness decrease	Flip the switch to select MAC/WIN																																																																																																
FN+F2	Homepage	Screen brightness increase																																																																																																	
FN+F3	Calculator	Multitasking controller																																																																																																	
FN+F4	Player	Program List																																																																																																	
FN+F5	Previous song	Nothing																																																																																																	
FN+F6	Next song	Nothing																																																																																																	
FN+F7	Play Pause	Previous song	Keyboard backlight flashing three times with white light																																																																																																
FN+F8	Suspend	Play Pause																																																																																																	
FN+F9	Mute	Next song																																																																																																	
FN+F10	Volume-g	Mute																																																																																																	
FN+F11	Volume+	Volume-																																																																																																	
FN+F12	Mailbox	Volume+																																																																																																	
FN+BAKSPACE	Long press and hold for 3S to reset	Long press and hold for 3S to reset	(Order: Colorful, Red, Orange, Yellow, Green, Green, Blue, Purple, White)																																																																																																
FN+[]	Keyboard backlight effect switching	Keyboard backlight effect switching																																																																																																	
FN+Enter	Keyboard backlight effect switching	Keyboard backlight effect switching	18 default light effects follow the current																																																																																																
FN+↑	Light brightness+	---	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.																																																																																																
FN+↓	Light brightness-	---	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.																																																																																																
FN+,<	Accelerated light effect speed	Accelerated light effect speed	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.																																																																																																
FN+,>	Slow down light effect speed	Slow down light effect speed	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.																																																																																																
FN+Home	END	END	---																																																																																																
FN+DEL	INS	INS	---																																																																																																
FN+L	Keyboard backlight switch	Keyboard backlight switch	---																																																																																																
FN+WIN-L	Lock WIN	Nothing	WIN bright blue light																																																																																																
FN+→	Light speed slows down	---	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.																																																																																																
FN+←	Accelerated light speed	---	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate.																																																																																																