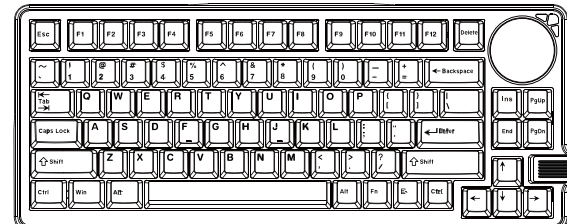 
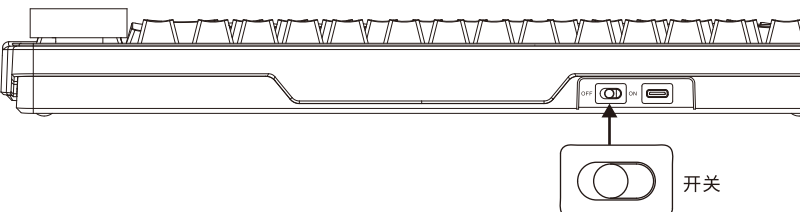 
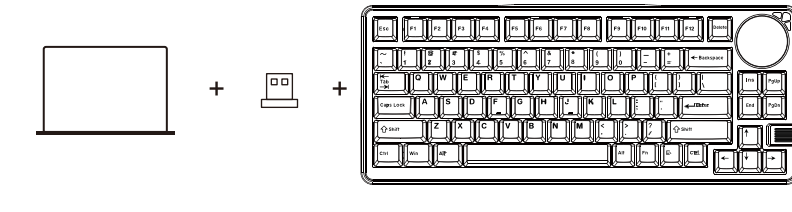 
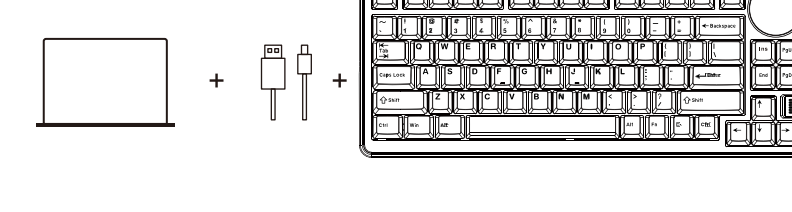 
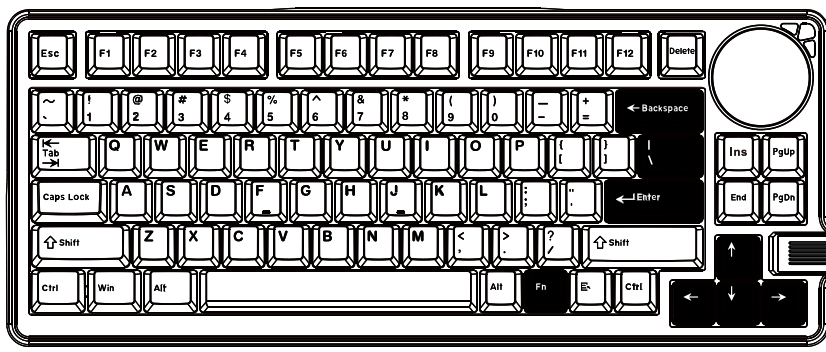 
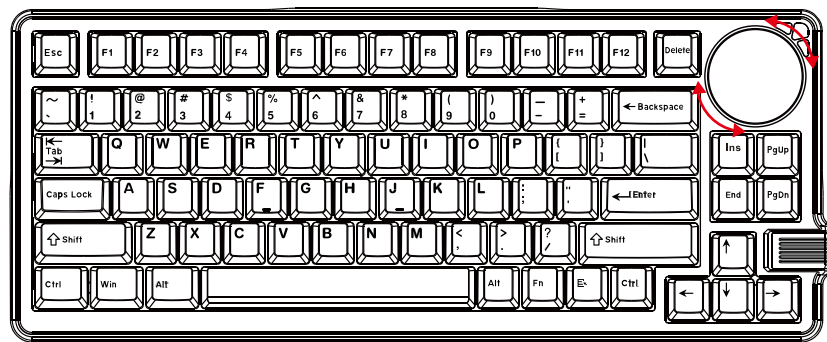 
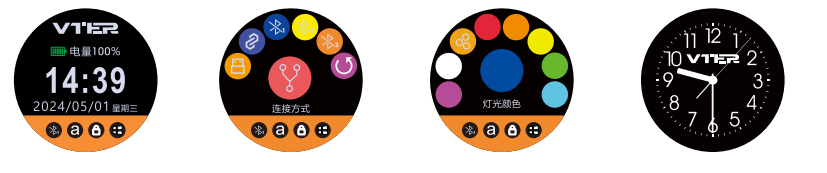 


尺寸:120x140mm
材质:128G铜板纸, 单色印刷, 折叠页

 K75青春版三模机械键盘 — 用户手册 — USER'S MANUAL	K75-青春版 产品参数 产品品牌：VTER 产品名称：K75-青春版 产品结构：板簧Gasket结构 产品尺寸：350x140x28mm 产品重量：≈900g 按键数量：83Key 电池容量：5000mAh 连接方式：有线-USB/蓝牙/2.4G 线材长度：≈1.5M 接口：线分离式typec接口 矩阵：全键无冲 背光：全彩RGB,18组灯效 兼容性：Windows7/8/9/10/11/Mac/Android/IOS  一、按键组合功能 <table> <tr> <th></th><th>WIN</th><th>MAC系统下单按</th><th>MAC</th></tr> <tr> <td>Fn+ESC</td><td>恢复出厂设置</td><td></td><td>恢复出厂设置</td></tr> <tr> <td>Fn+F1</td><td>多媒体</td><td>显示器亮度-</td><td>F1</td></tr> <tr> <td>Fn+F2</td><td>音量-</td><td>显示器亮度+</td><td>F2</td></tr> <tr> <td>Fn+F3</td><td>音量+</td><td>平铺展开当前活动的多个窗口</td><td>F3</td></tr> <tr> <td>Fn+F4</td><td>静音</td><td>直接进入应用程序主界面</td><td>F4</td></tr> <tr> <td>Fn+F5</td><td>上一曲</td><td>键盘背光亮度减</td><td>F5</td></tr> <tr> <td>Fn+F6</td><td>下一曲</td><td>键盘背光亮度加</td><td>F6</td></tr> <tr> <td>Fn+F7</td><td>播放/暂停</td><td>上一曲</td><td>F7</td></tr> <tr> <td>Fn+F8</td><td>停止</td><td>播放/暂停</td><td>F8</td></tr> <tr> <td>Fn+F9</td><td>邮件</td><td>下一曲</td><td>F9</td></tr> <tr> <td>Fn+F10</td><td>网页</td><td>静音</td><td>F10</td></tr> <tr> <td>Fn+F11</td><td>我的电脑</td><td>音量-</td><td>F11</td></tr> <tr> <td>Fn+F12</td><td>计算器</td><td>音量+</td><td>F12</td></tr> <tr> <td>Fn+U</td><td>SCRLK</td><td></td><td>SCRLK</td></tr> <tr> <td>Fn+I</td><td>PAUSE</td><td></td><td>PAUSE</td></tr> <tr> <td>Fn+O</td><td>Home</td><td></td><td></td></tr> <tr> <td>Fn+Y</td><td>PARTSC</td><td></td><td>PARTSC</td></tr> <tr> <td>Fn+L_Win</td><td>WIN锁</td><td></td><td>\</td></tr> <tr> <td>Fn+Z</td><td>板载层1</td><td></td><td>板载层1</td></tr> <tr> <td>Fn+X</td><td>板载层2</td><td></td><td>板载层2</td></tr> <tr> <td>Fn+C</td><td>板载层3</td><td></td><td>板载层3</td></tr> <tr> <td>Fn+ 空格键</td><td colspan="3">电池电量查询（电池电源在无线模式下有效）</td></tr> </table> 按下Fn+ 空格键将点亮数字键1至0，代表10%至100%的电池电量。（例如：1个点亮，表示电池电量为10%，1个和2个点亮，指示电池电量为20%。）		WIN	MAC系统下单按	MAC	Fn+ESC	恢复出厂设置		恢复出厂设置	Fn+F1	多媒体	显示器亮度-	F1	Fn+F2	音量-	显示器亮度+	F2	Fn+F3	音量+	平铺展开当前活动的多个窗口	F3	Fn+F4	静音	直接进入应用程序主界面	F4	Fn+F5	上一曲	键盘背光亮度减	F5	Fn+F6	下一曲	键盘背光亮度加	F6	Fn+F7	播放/暂停	上一曲	F7	Fn+F8	停止	播放/暂停	F8	Fn+F9	邮件	下一曲	F9	Fn+F10	网页	静音	F10	Fn+F11	我的电脑	音量-	F11	Fn+F12	计算器	音量+	F12	Fn+U	SCRLK		SCRLK	Fn+I	PAUSE		PAUSE	Fn+O	Home			Fn+Y	PARTSC		PARTSC	Fn+L_Win	WIN锁		\	Fn+Z	板载层1		板载层1	Fn+X	板载层2		板载层2	Fn+C	板载层3		板载层3	Fn+ 空格键	电池电量查询（电池电源在无线模式下有效）			二、连接方式组合键及连接方式 <table> <tr> <th>组合键</th><th>WIN</th><th>MAC</th></tr> <tr> <td>FN+F1</td><td>蓝牙1</td><td>蓝牙1</td></tr> <tr> <td>FN+F2</td><td>蓝牙2</td><td>蓝牙2</td></tr> <tr> <td>FN+F3</td><td>蓝牙3</td><td>蓝牙3</td></tr> <tr> <td>FN+F4</td><td>2.4G模式</td><td>2.4G模式</td></tr> </table> 1、蓝牙模式： a. 开关向右并处于接通状态。 b. 按住FN+1/2/3组合键3秒，键盘进入配对模式，1/2/3灯快速闪烁，1/2/3指示灯在连接设备后保持常亮3秒。 C. 如果配对失败，指示灯熄灭，键盘进入休眠状态。 	组合键	WIN	MAC	FN+F1	蓝牙1	蓝牙1	FN+F2	蓝牙2	蓝牙2	FN+F3	蓝牙3	蓝牙3	FN+F4	2.4G模式	2.4G模式	2、2.4G模式： a. 向右切换激活ON状态，按住FN+4组合键3秒，使键盘进入2.4G模式。 b. 指示灯快速闪烁，插入2.4G接收器，成功后退出配对。 C、30秒后退出配对模式，如果没有找到配对的设备，指示灯熄灭，键盘进入休眠状态。  3、有线模式： 向左切换到OFF状态，进入有线模式。 	三、键盘照明设置 <table> <tr> <th>组合键</th><th>WIN</th><th>MAC</th></tr> <tr> <td>FN+\</td><td>灯光模式切换</td><td>灯光模式切换</td></tr> <tr> <td>FN+Backspace</td><td>单色灯开关</td><td>单色灯开关</td></tr> <tr> <td>FN+Enter</td><td>打开/关闭背光</td><td>打开/关闭背光</td></tr> <tr> <td>FN+↑</td><td>背光亮度↑</td><td>背光亮度↑</td></tr> <tr> <td>FN+↓</td><td>背光亮度↓</td><td>背光亮度↓</td></tr> <tr> <td>FN+←</td><td>背光速度-</td><td>背光速度-</td></tr> <tr> <td>FN+→</td><td>背光速度+</td><td>背光速度+</td></tr> </table> 	组合键	WIN	MAC	FN+\	灯光模式切换	灯光模式切换	FN+Backspace	单色灯开关	单色灯开关	FN+Enter	打开/关闭背光	打开/关闭背光	FN+↑	背光亮度↑	背光亮度↑	FN+↓	背光亮度↓	背光亮度↓	FN+←	背光速度-	背光速度-	FN+→	背光速度+	背光速度+	四、旋钮屏幕设置  旋钮默认功能：旋转为音量+/音量-，按压为播放/暂停，FN+按下旋钮屏进入屏幕控制模式。 屏幕功能如下： - 待机画面（有电量指示、时间、日期、星期、连接模式、大小写、WIN锁模式、系统模式）（图1） - 键盘连接模式（有线、蓝牙、2.4G）（图2）注意：蓝牙模式和2.4G模式进入时会有三种状态！正在搜索、配对、已连接 - 键盘灯光控制（模式、速度、亮度）（图3） - 键盘休眠时全显示时钟屏保（图4）  图1 图2 图3 图4
	WIN	MAC系统下单按	MAC																																																																																																																																					
Fn+ESC	恢复出厂设置		恢复出厂设置																																																																																																																																					
Fn+F1	多媒体	显示器亮度-	F1																																																																																																																																					
Fn+F2	音量-	显示器亮度+	F2																																																																																																																																					
Fn+F3	音量+	平铺展开当前活动的多个窗口	F3																																																																																																																																					
Fn+F4	静音	直接进入应用程序主界面	F4																																																																																																																																					
Fn+F5	上一曲	键盘背光亮度减	F5																																																																																																																																					
Fn+F6	下一曲	键盘背光亮度加	F6																																																																																																																																					
Fn+F7	播放/暂停	上一曲	F7																																																																																																																																					
Fn+F8	停止	播放/暂停	F8																																																																																																																																					
Fn+F9	邮件	下一曲	F9																																																																																																																																					
Fn+F10	网页	静音	F10																																																																																																																																					
Fn+F11	我的电脑	音量-	F11																																																																																																																																					
Fn+F12	计算器	音量+	F12																																																																																																																																					
Fn+U	SCRLK		SCRLK																																																																																																																																					
Fn+I	PAUSE		PAUSE																																																																																																																																					
Fn+O	Home																																																																																																																																							
Fn+Y	PARTSC		PARTSC																																																																																																																																					
Fn+L_Win	WIN锁		\																																																																																																																																					
Fn+Z	板载层1		板载层1																																																																																																																																					
Fn+X	板载层2		板载层2																																																																																																																																					
Fn+C	板载层3		板载层3																																																																																																																																					
Fn+ 空格键	电池电量查询（电池电源在无线模式下有效）																																																																																																																																							
组合键	WIN	MAC																																																																																																																																						
FN+F1	蓝牙1	蓝牙1																																																																																																																																						
FN+F2	蓝牙2	蓝牙2																																																																																																																																						
FN+F3	蓝牙3	蓝牙3																																																																																																																																						
FN+F4	2.4G模式	2.4G模式																																																																																																																																						
组合键	WIN	MAC																																																																																																																																						
FN+\	灯光模式切换	灯光模式切换																																																																																																																																						
FN+Backspace	单色灯开关	单色灯开关																																																																																																																																						
FN+Enter	打开/关闭背光	打开/关闭背光																																																																																																																																						
FN+↑	背光亮度↑	背光亮度↑																																																																																																																																						
FN+↓	背光亮度↓	背光亮度↓																																																																																																																																						
FN+←	背光速度-	背光速度-																																																																																																																																						
FN+→	背光速度+	背光速度+																																																																																																																																						

K75-Youth edition

Product parameter

Product brand: VTER

Product Name:K75-youth

Product structure: Leaf spring gasket structure

Product size: 350x140x28mm

Product weight: ≈ 900g

Number of keys: 83Keys

Battery capacity: 5000mAh

Connection method: Wired-USB/ Bluetooth /2.4G

Wire length: ≈1.5M

Interface: Keywire separation type C interface

Matrix: Full key no impact

Backlight: Full color RGB, 18 sets of lighting effects

Compatibility: Windows 7/8/9/10/11/Mac/Linux

- 7 -

1、Key combination function

Combination key	WIN	MAC system orders and presses	MAC
FN+ESC	Restore factory settings	Restore factory settings	
FN+F1	multi-media	Display brightness-	F1
FN+F2	Volume-	Display brightness+	F2
FN+F3	Volume+	Title multiple currently active windows	F3
FN+F4	mute	Directly enter the main interface of the application program	F4
FN+F5	Last song	Keyboard backlight brightness-	F5
FN+F6	Next song	Keyboard backlight brightness+	F6
FN+F7	Play/pause	Previous song	F7
FN+F8	stop	Play/Pause	F8
FN+F9	e-mail	Next song	F9
FN+F10	webpage	Mute	F10
FN+F11	my computer	Volume-	F11
FN+F12	calculator	Volume+	F12
FN+U	SCRLK		SCRLK
FN+I	PAUSE		PAUSE
FN+O	HOME		HOME
FN+Y	PRTSC		PRTSC
FN+L_Win	WIN lock		\
FN+Z	Onboard1		Onboard 1
FN+X	Onboard2		Onboard2
FN+C	Onboard3		Onboard3
FN+Spacebar	Battery power inquiry (battery power is effective in wireless mode)		
Pressing the FN+space bar will illuminate the number keys 1 to 0, representing 10% to 100% battery power. (For example, 1 light indicates a 10% battery level, 1 and 2 bright spots indicate a 20% battery level)			

- 8 -

2、 Connection method combination key and connection method

Key combination	WIN	MAC
FN+F1	Bluetooth 1	Bluetooth 1
FN+F2	Bluetooth 2	Bluetooth 2
FN+F3	Bluetooth 3	Bluetooth 3
FN+F4	2.4G mode	2.4G mode

1. Bluetooth mode:

a. The switch is turned to the right and on.
b. Press and hold the FN+1/2/3 combination key for 3 seconds, and the keyboard enters pairing mode. The 1/2/3 light quickly flashes, and the 1/2/3 indicator light remains on for 3 seconds after connecting the device.
C. If pairing fails, the indicator light will turn off and the keyboard will enter sleep mode.

2. 2.4G mode:

a. Switch to the right to activate the ON state, press and hold the FN+4 combination key for 3 seconds to put the keyboard into 2.4G mode.
b. The indicator light quickly flashes, inserts a 2.4G receiver, and exits pairing after success.
C. After 30 seconds, exit pairing mode. If no paired device is found, the indicator light will turn off and the keyboard will enter sleep mode.

3. Wired mode:

Switch to the OFF state to the left and enter wired mode.

- 9 -

3、 Keyboard lighting settings

Key combination	WIN	MAC
FN+\	Light mode switching	Light mode switching
FN+Backspace	Monochrome light switch	Monochrome light switch
FN+Enter	Turn backlight on/off	Turn backlight on/off
FN+↑	Backlight brightness ↑	Backlight brightness ↑
FN+↓	Backlight brightness ↓	Backlight brightness ↓
FN+←	Backlight speed-	Backlight speed-
FN+→	Backlight speed+	Backlight speed+

- 11 -

4、 Knob screen settings

The default function of the knob: the knob is sound+/volume-.pressing is analogy/pause, FN+ pressing the knob screen: enter the screen control
The screen functions are as follows:
1. Standby screen (power display, time, date, week, connection mode, case, WIN lock mode, system mode) (Figure 1)
2. Keyboard connection mode (wired, Bluetooth, 2.4 G)(Figure 2)
Note: Bluetooth mode and 2.4 G mode will enter into three states: searching, pairing and connected.
3. Keyboard lighting control (mode, speed, brightness)(Figure 3)
4. The clock screen saver will be displayed when the keyboard sleeps (Figure 4)

Figure 1

Figure 2

Figure 3

Figure 4

- 12 -

产品质保

感谢您对VTER产品的信任和支持，为了让您放心使用产品，更好的保证您的权益。我可将严格遵守并执行相关规定，实行售后。
1、服务有效期：自购买之日起质量保证12个月，终生维护，配件不在保修范围内；
2、服务内容：按微型计算机商品维修更换退货责任规定进行服务；
3、不属于服务范围：
a.已超出有效服务或免费维修的期；
b.未按照正确说明使用、维护、保管导致故障或损坏的；
c.由于不可抗力（如自然灾害等）原因造成的产品之不良；
d.人为因素导致产品不良（如操作失误，碰撞，进水，输入不合电压等）；
e.一切人为损坏、自行拆机、拆封标、使用不当等，不在保修范围。

质保卡

产品型号: _____
购买日期: _____
客户姓名: _____
联系电话: _____
联系地址: _____
更多产品信息请关注
VTER官网
https://www.vtergaming.com

执行标准: GB/T 14081-2010